1 Research of a 3-phase bridge thyristor converter

The aim of the work is to study the operation and characteristics of a 3-phase full-bridge thyristor converter and special circuits of converters with an increased power factor built on its basis.

1.1 4.1 Lab Description

Laboratory stand (Fig. 4.1) includes:

- controlled rectifier, made according to the 3-phase full-bridge circuit on the thyristors VS1-VS6;
- system of pulse-phase control of thyristors (SPPC);
- load circuits containing active resistances R7, R9, smoothing inductance L, an electric machine unit from two DC machines (M1, G1) with a tachogenerator (BR) and the power supply circuit of their field windings;
- relay-contactor, switching and measuring equipment.

The converter under study, the inclusion of which is carried out by the Q1 switch, is powered from a 380/220 V network through a 3-phase transformer T.

The three-position switch Q2 allows you to connect in parallel to the thyristor full-bridge either two half-bridge uncontrolled valves (upper position Q2, diodes VD1, VD2), or one bypass uncontrolled valve (lower position Q2, diode VD1).

To determine the parameters of the operating modes of the converter on the AC side, an ammeter PA1, a voltmeter PV1, and a power meter PW with a switch S1 are included, providing a change in the connection circuit of the voltage coil for measuring active and reactive powers. The voltage and current on the DC side of the converter are determined by the devices PV2 and PA2, respectively.

The angle of regulation of the Converter for changing the rectified voltage is changed by adjusting the input voltage control SPPC potentiometer R11. To measure the input voltage, a PV4 voltmeter is used. Potentiometers R15 - R17 of the input node of the SPPC (see Fig. 3.1), designed to adjust the initial, minimum and maximum values of the control angle, are placed on the front panel of the laboratory bench. The choice of the load

nature of the converter is carried out by switch S2. The upper position S2 corresponds to the active load (resistor R7), and the lower one corresponds to the operation of the converter to the armature of the machine M1 with inductance L connected in series.

In the rectifier mode of operation of the converter, M1 is used as a motor, and G1 – as a generator loaded on resistor R9. In the inverter mode of the converter, G1 is used as a motor connected through a resistor R8 to a 110 V DC source, and M1 acts as a generator, loaded on the DC circuit of the converter. The frequency of rotation of electric machines is controlled by a voltmeter PV3, which measures the voltage of the tachogenerator BR.

The selection of the rectifier or inverter mode is carried out, respectively, by the SB2 and SB3 buttons. Regulation of the load current value in these modes is carried out by potentiometer R10, which provides a change in the excitation current of the machine M1 (in the rectifier mode of the converter) or G1 (in the inverter mode). An additional means of regulating the load current of the converter in the rectifier mode is the resistor R9, and in the inverter mode - the resistor R8.

The K4.2 contact block of the K4 relay, whose coil (K4.1) is connected to the thyristor bridge output, does not allow the contactors K2 and K3 to turn on at a non-zero value of the rectified voltage, thereby preventing the inrush current of the armature M1 when the contacts K2.2 or K3.2 are turned on. Similarly, the K5.2 contact block of relay K5, the coil of which is connected to the output of potentiometer R10, does not allow the contactor K3 to turn on at a non-zero value of the excitation voltage M1, preventing current surges when the armature circuit M1 is closed by contact K3.2 in the inverter mode of the converter.

On the front panel of the laboratory bench, terminals X1-X2 and X7-X8 are installed, which allow you to observe, using an electronic oscilloscope, the curves of the output voltage of the converter and control pulses at the output of one of the SPPC channels.

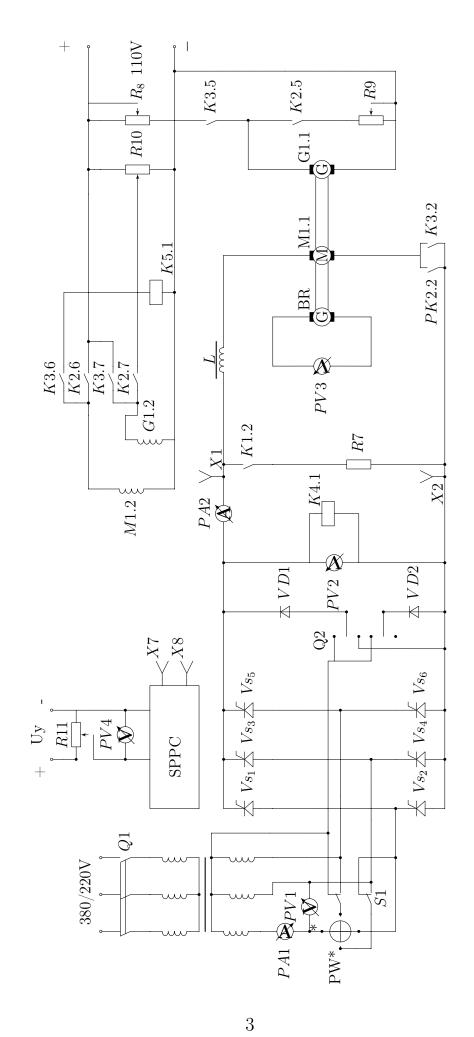


Figure 1: Laboratory arrangement

1.2 4.2. Task 1

- 1. Using the adjustment potentiometers R15-R17 of the input SPPC node, set the following values of the minimum, initial and maximum control angles: $\alpha_{min} = 0^{\circ}$, $\alpha_{initial} = 90^{\circ}$, $\alpha_{max}145^{\circ}$.
- 2. To observe and draw graph of the control characteristic of SPPC $\alpha = f(U_c)$.
- 3. When the converter is operating for constant active resistance R7, observe and draw graph of the control characteristic $U_d = f(\alpha)$. For the four values of a (15, 45, 75 and 105°), draw the rectified voltage curves $U_d = f(\omega t)$ from the oscilloscope screen.
- 4. When working on an anchor of a DC machine with a constant current value $I_d = 0.3$ A, observe and draw graph of the control characteristic $U_d = f(\alpha)$ for the rectifier and inverter modes of the converter. For values of a (15, 45, 75, 105, and 120°), draw the rectified voltage curves $U_d = f(\omega t)$ from the oscilloscope screen.
- 5. To observe and draw graph of a family of external characteristics of the converter $U_d = f(I_d)$ with control angles a equal to 15, 75, 105 and 120°.

1.3 4.3. Task 2

- 1. When working on the anchor of a DC machine, observe and draw graph of adjusting characteristics $U_d = f(\alpha)$ at a constant value of the rectified current Id = 0.3 A of 3-phase full-bridge thyristor rectifiers with two zero and one shunt diodes. Draw from the oscilloscope screen the curves of the instantaneous value of the rectified voltage of the rectifiers at angles of 15, 45, 75, 105 and 120°.
- 2. For a 3-phase full-bridge thyristor converter (in rectifier and inverter modes) and for special converter circuits with two zero and one shunt diodes (in rectifier mode) when working on an anchor of a DC machine with a constant value of the rectified current $I_d = 1$ A observe and draw graph of energy characteristics: efficiency η), reactive power (Q) and power factor (λ) from the rectified voltage.

1.4 4.4. Methodological instructions for the performance of work

- 1. The α_{min} , $\alpha_{initial}$, α_{max} values should be set using an oscilloscope along the curve $U_d = f(\omega t)$ during operation of the converter for active load with zero diodes turned on (upper position Q2). Adjust the sweep of the oscilloscope in such a way that the entire range of the angle of adjustment fits on the screen. The angle a should be counted from its zero value by the sinusoid of one of the converter phases.
- 2. The adjustment characteristics of the SPPC (see 1.2.2) and the converter during its operation at the active resistance (see 1.2.3) should be taken simultaneously using an oscilloscope (as indicated in 1) and voltmeters PV2 and PV4.
- 3. Oscillograms of the curves of the instantaneous value of the rectified voltage should be plotted on a scale at a time interval equal to one period of the supply network.
- 4. The graphs of the adjusting characteristics of the converter $U_d = f(\alpha)$ when operating under active load (see 4.2, p. 3) and at the anchor of a DC machine (see 4.2, p. 1; 4.3, p. 1) should be depicted on one picture.
- 5. When taking the energy characteristics (see 4.3, p. 2), all measuring devices are used that are installed on the alternating (PA1, PV1, PW) side and on the constant (PA2, PV2) side of the converter currents.

The efficiency values are determined based on the readings of PW, PA2 and PV2 in accordance with the ratios:

• in rectifier mode $(U_d > 0)$:

$$\eta = \frac{U_d I_d}{P}$$

• in inverter mode $(U_d < 0)$:

$$\eta = \frac{P}{U_d I_d}$$

where P is the active power on the AC side of the converter, determined by the readings of PW.

It should be noted that PW measures the power of one phase at the input of the thyristor bridge, so the total value of P is equal to the

triple value of the power measured by PW. In addition, the power measured by PW in the rectifier and inverter modes of the converter has the opposite direction, therefore, the substitution of the values of P and Ud in expressions (4.1), (4.2) should be made taking into account their signs.

When measuring the reactive power of the coil of the wattmeter voltage, the PW is switched on to a linear voltage, so its readings correspond to the reactive power of one phase increased by 3 times, and to obtain the full value of the reactive power Q these readings should be multiplied by 3: $Q = 3Q_{PW}$.

To determine the power factor, the readings of the PW, PA1 and PV1 devices are used:

$$\lambda = \frac{\sqrt{3}P_{PW}}{I_{PA1}U_{PV1}}$$

Graphs of all energy characteristics are plotted in relative units in the form of dependencies:

$$\eta = f(\overline{U_d}; \overline{q}) = f(\overline{U_d}); \lambda = f(\overline{U_d})$$

where $Ud = \frac{U_d}{E_{d0}}$ is the relative value of the rectified voltage, $q = \frac{Q}{E_{d0}I_d}$ is the relative value of reactive power; E_{d0} is the maximum value of the rectified EMF of the converter. The value of E_{d0} is determined based on the readings of PV1 from the ratio

$$E_{d0} = \frac{3\sqrt{2}}{\pi} U_{PV1}$$

The graphs of each of the energy characteristics (4.3) for all three converter circuits are plotted in the same figure with the same scale on both axes.

1.5 4.5. Report content

The report should include:

1. laboratory setup diagram with a brief description thereof;

- 2. tables, graphs specified in the task characteristics of the investigated transducer and waveforms;
- 3. brief conclusions on the results of research.