1 Study of three-phase autonomous voltage inverter

1.1 Objective

Study of electromagnetic processes, common characteristics and energy characteristics of a three-phase autonomous voltage inverter (AVI).


1.2 Description of the laboratory setup

The laboratory setup includes the following modules: "Frequency converter" /Преобразователь частоты/, "Load" /Нагрузка/, "Power module"/Модуль питания/, "Thyristor converter" /Тиристорный преобразователь/, "Measuring module"/Модуль измерительный/, "Multimeters" /Мультиметры/, "Power meter" /Измеритель мощности/, a two-channel oscilloscope.

The Frequency Converter module provides conversion of alternating voltage 220 V with a frequency of 50 Hz into three-phase voltage with adjustable voltage and frequency values.

The front panels of the "Frequency Converter" and "Load" modules are shown in Fig. 1,2 respectively. The Frequency Converter module (see Fig. 1) contains:

- frequency converter E2-MINI-SP5L;
- power connectors for supplying single-phase input voltage A and N and removing output voltage A1, B1 and C1;
- power connectors for rectified voltage U_d : "+" connector X5 and "-" connector X6;
- potentiometer for setting the control signal PR1 for simultaneous regulation of the frequency and output voltage;
- button SB1 "Reset"/Cópoc/ to reset the error after the protection has been triggered;
- switch SA1, changing the phase sequence (direction of rotation);
- frequency meter for measuring the frequency at the output of the AVI;
- LEDs signaling power supply, normal operation and protection activation;
- voltage (ДН) and current (ДТ) sensor for oscillography and measurements of voltages and currents in the circuit.

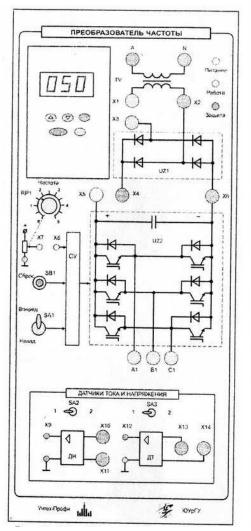

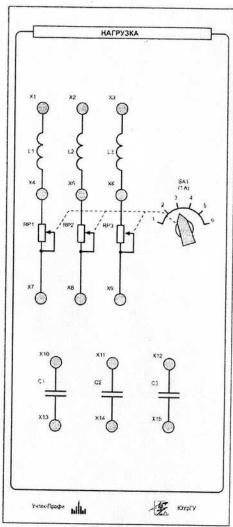


Рис. 1: Frequency converter

Рис. 2: Load

The module is powered from the AC mains through an isolation transformer TV, which provides potential isolation from the mains.

The Frequency Converter module consists of two units (see Fig. 1). The first unit of the frequency converter (FC) is an uncontrolled diode rectifier (UZ1), made using a single-phase bridge circuit. The second unit is a three-phase AVI made on IGBT transistors (UZ2). A capacitive filter is enabled at the UZ2 input.

In this work, we study the second unit - a three-phase autonomous voltage inverter.

The Frequency Converter module contains current (\Box T) and voltage (\Box H) sensors, which are used for oscillography and measurement of voltages and currents in the circuit. Voltage signals are supplied to connectors X10 and X11, and current signals are supplied to connectors X13 and X14. Connectors X9, X12 and the common wire " \bot " are used to connect the

output circuits $\[Delta T$ and $\[Delta H$ to the oscilloscope or the input/output module. Voltage sensor conversion coefficient $k_v = 40V/V$, current sensor conversion coefficient $k_c = 0.25A/V$. The actual voltage and current values are determined by multiplying the values measured using an oscilloscope by the corresponding sensor factor.

Using toggle switches SA2 and SA3 of the "Frequency Converter" module, the bandwidth of the sensors is changed, which allows you to observe either the PWM signal (position "2") or its first harmonic (position "1") on the screen of an oscilloscope or computer.

The "Frequency Converter" module is powered through sockets A and N of the three-phase alternating voltage source through the QF2 circuit breaker located in the power module.

The "Load" module (see Fig. 2), containing reactors (L1 - L3), resistors (RP1 - RP2) and capacitors (C1 - S2) is used as an AVI load.

In the "Load" module, only the active phase resistances (RP1 - RP) are regulated, and the reactive elements remain unchanged. Regulation is made by switch SA1. The resistor values corresponding to the switch positions are given in table 1.

Switch position
$$SA1$$
 | 1^* | 2 | 3 | 4 | 5 | 6 Load Resistance (Ohm) | 100 | 200 | 400 | 600 | 1000 | 1600 Таблица 1

Note: "*" marks prohibited switch positions. The inductances (L1 - L3) are 80mH, and the capacitances (C1 - C2) are $10\mu F$.

To obtain a three-phase active-inductive load, it is necessary to install jumpers between sockets X7 - X8 and X8 - X9 (zero load point).

1.3 The procedure for turning the installation on and off

- 1. Assemble an experimental scheme for performing laboratory work.
- 2. In the "Frequency Converter" module, set toggle switch SA1 ("Rotation direction") to the middle position, frequency setting potentiometer RP1 to the zero position.
- 3. Set switch SA1 on the "Load" module to the position of maximum resistance (far right position).

- 4. Turn on the machine QF1 of the "power module of the stand", turn on the machine QF2 of the "power module".
- 5. Turn on the "Power" toggle switch of the "Power Meter" module.
- 6. In the "Frequency Converter" module, switch toggle switch SA1 to the upper position. The "Operation" LED will light up.
- 7. Use potentiometer RP1 to set the required frequency f and the corresponding load voltage. In this case, the law $U_{l lin}/f = const$ is satisfied.
- 8. Set switch SA1 to the required resistance on the "Load" module.

Shutdown procedure: turn off the SA1 toggle switch of the "Frequency Converter" module, and then the "Power" toggle switch of the "Power Meter" module, turn off the QF2 "Power Module" circuit breaker.

1.4 Assignment and guidelines

- 1. Preliminary homework:
 - (a) study the topic of the course: "Autonomous voltage inverters", "Energy indicators of rectifiers", the content of this work and be ready to answer all test questions;
 - (b) calculate the modulation coefficient μ for a given option. It is recommended to determine the modulation depth from the relation

$$\mu = \frac{U_{lin \, m}}{U_d} = \frac{f}{f_{max}} \tag{1}$$

where $U_{lin m}$ is the amplitude value of the line-line voltage at the output of the AVI;

 U_d – constant voltage at the input of the AVI;

f, f_{max} are the specified and maximum frequency at the output of the AVI, respectively;

- (c) calculate for a given option the highest effective values of the first harmonic of line $U_{L lin(1)max}$ and phase $U_{L ph(1)max}$ voltages on the load for different modulation methods:
 - when generating average voltages at the terminals relative to the midpoint of the power source

$$U_{L \, lin(1)max} = \frac{\sqrt{3} \cdot U_d}{2\sqrt{2}}, \quad U_{L \, ph(1)max} = \frac{U_d}{2\sqrt{2}}$$
 (2)

- when generating phase voltages using a space vector

$$U_{L \, lin(1)max} = \frac{U_d}{\sqrt{2}}, \quad U_{L \, ph(1)max} = \frac{U_d}{\sqrt{6}}$$
 (3)

(d) calculate the RMS-values of the first harmonic of line-line $U_{L lin(1)}$ and phase $U_{L ph(1)}$ voltages on the load for different modulation methods at a given frequency f and the calculated modulation coefficient μ :

$$U_{L lin(1)} = \mu U_{L lin(1)max}, \quad U_{L ph(1)} = \mu U_{L ph(1)max}$$
 (4)

- 2. Experimental study of three-phase AVI:
 - (a) assemble a circuit for studying a three-phase AIN when operating on an active-inductive load in accordance with Fig. 3. Additional jumpers and measuring instruments connected to the circuit are shown with a dashed line.

In table 2 shows measuring instruments, and table. 3 current and voltage sensors used in laboratory work, in accordance with the accepted designations on the circuit diagram (see Fig. 3). table 2

Measured quantities	Device designation	Measurement limit	Device location (module name)
Direct voltage at the input of the AVI U_d	PV1	= 1000V	Multimeters
Direct current at the AVI input I_d	PA1	_	Measuring module
RMS-value of the first harmonic of the phase voltage $U_{Lph(1)}$ and phase current $I_{Lph(1)}$ at the output of the AVI	PW1	$U_{L ph(1)} \approx 300V;$ $I_{L ph(1)} \approx 2A$	Power meter

Таблица 2

Set the toggle switches SA2 and SA3 of the voltage (ДН1 – ДН2) and current (ДТ1 – ДТ2) sensors in the "Thyristor Converter" and "Frequency Converter" modules to position "2" (the filter is off). Set the required measurement limits on measuring instruments according to table. 2;

(b) take oscillograms of the first harmonic of the phase voltage $u_{Lph(1)}$ and current $i_{Lph(1)}$ at the output of the AVI using an oscilloscope for a given load resistance R_L and control frequency f. To do this, connect the oscilloscope to the \Box T2 current sensor (channel CH2 – socket X12, connect the oscilloscope corpus to socket " \bot " \Box T2) and voltage sensor \Box H2 (channel CH1 – socket X9). Perform the necessary operations specified in the order in which the installation was turned on. Use potentiometer RP1 in the "Frequency Converter" module to set the specified value of control frequency f, and switch SA1 in the "Load" module set the specified value of load resistance R_L .

Measured signal	Device designation	Device location (module name)
Instantaneous voltage value at the AVI input u_d	ДН1	Thyristor converter
Instantaneous current value at the AVI input i_d	ДТ1	Thyristor converter
Instantaneous value of phase voltage at the output of the AVI u_{Lph}	ДН2	Frequency converter
Instantaneous value of the phase current at the output of the AVI i_{Lph}	ДТ2	Frequency converter

Таблица 3

First, look at the oscillograms with a wide bandwidth of the sensors (position "2" of the toggle switches SA2 and SA3 of the "Frequency Converter" module), and then, switching the toggle switches SA2 and SA3 of the sensors to position "1", sketch the oscillograms of the first harmonics of the phase voltage $u_{Lph(1)}$ and current $i_{Lph(1)}$. Pay attention to the phase shift between them (angle φ), as well as to the change in phase shift when the control frequency f changes. Don't forget to define the voltage, current and time scales taking into account the sensor coefficients;

(c) take oscillograms of voltage ud and current id at the input of the AVI at the same values of load resistance R_L and control frequency f. To do this, connect the oscilloscope to the current sensor \Box T1

(channel CH2 - socket X18, connect the oscilloscope body to socket " \bot " \bot " \bot " \bot " and the voltage sensor \bot H1 (channel CH1 – socket X15). Explain the pulsed nature of the current consumed by the AVI at the input;

- (d) remove the regulating characteristics $U_{Lph(1)} = F(f)$, $\mu = F(f)$ and energy characteristics $P_d = F(f)$, $P_L = F(f)$, $S_L = F(f)$, $\cos \varphi_L = F(f)$, $\eta_L = F(f)$ of an autonomous voltage inverter when regulated according to the law U/f = const and a given value R_L . Change the frequency in the range of 10 50 Hz. To increase the measurement accuracy by eliminating interference, connect the zero point of the "Load" module (socket X7) to ground (socket N of the "Power module"). Record the following values and enter them into the table. 4:
 - f frequency at the output of the AI;
 - U_d , I_d constant voltage and current at the input of the AI, respectively;
 - $U_{L ph(1)}$, $I_{L ph(1)}$ are the RMS-values of the first harmonic of the phase voltage and current at the output of the AVI, respectively;
 - I_{Lph} , $\cos \varphi_L$ phase power at the output of the AIN and $\cos \varphi$ converter, measured by the "Power Meter" module, respectively.

Output power

$$P_d = U_d \cdot I_d \tag{5}$$

Active and full power at load

$$P_L = 3 \cdot P_{L ph}, \quad S_L = 3 \cdot U_{L ph} \cdot I_{L ph} \tag{6}$$

Efficiency coefficient AIN

$$\eta_L = P_L/P_d \tag{7}$$

Modulation factor

$$\mu = \frac{\sqrt{3}\sqrt{2}U_{L\,ph(1)}}{U_d} \tag{8}$$

- (e) repeat experiment 2d with a different value of RH specified by the teacher. Based on the data of experiments 2d,d, construct the dependences Unf(1)
- f) remove the external Unf(1) = F and the energy characteristics of an autonomous voltage inverter at a given frequency value f. To do this,

use potentiometer RP1 in the "Frequency Converter" module to set the set frequency value f (frequency according to the device) and change the load current Inf with switch SA1 in the "Load" module. Record the same values as in experiment 2d, as well as the value of RH. Enter the data into the table. 5;

g) repeat experiment 2e with a different value of f specified by the teacher. Based on the data of experiments 2 f, g, construct the dependences Unf

Turn off the SA1 toggle switch of the "Frequency Converter" module, the "Network" toggle switch of the "Power Meter" module, as well as the QF2 "Power Module" and QF1 "Bench Power Module" circuit breakers. Contents of the report

The report should contain the following points:

- a) name and purpose of the work;
- 6) electrical circuit diagrams for performing experiments;
- c) the results of experimental studies and calculations based on them, placed in the appropriate tables;
 - D) experimentally measured and constructed characteristics;
 - e) processed oscillograms;
 - (C)) comparison of experimental results and preliminary calculations;
 - g) conclusions from the work:
 - Indicate which modulation method is used in the AIN;
- explain the influence of load current on the regulating characteristics of the AUV;
- explain the influence of control frequency and load current on energy AIN indicators.

Control questions

- 12. What is the difference between a slave and an autonomous inverter? 13. What is the difference between an autonomous voltage inverter and an autonomous inverter? current? 14. Why are reverse diodes turned on in voltage inverters? 15. Why is there a capacitor at the input of the AI? 16. How to change the output frequency of a stand-alone inverter? 17. What depends on the carrier frequency? 18. Show the contours of current flow in a three-phase AIN. 19. How is the shape and magnitude of the voltage in the AIN regulated? 20. Compare the methods of generating phase voltages in three-phase AIN according to maximum achievable voltages and switching losses. 21. Which autonomous inverters are most promising in electric drives in present time? 22. What is the type of external characteristic of AIN? What does the slope of the characteristic depend on?
 - 23. How to remove an external characteristic?
 - 24. What is the regulating (frequency) characteristic of an autonomous

inverter?

25. What type and why does the regulating (frequency) characteristic of the AIN for an electric drive have? 26. How to remove the adjustment (frequency) characteristic? 27. What determines the non-sinusoidal coefficient of the load current curve? 28. How to determine the efficiency of an AIN? 29. The procedure for turning on and off the laboratory installation.